

ATA Firmware Upgrade methods:

Please find the firmware of ATA, and be sure to check the firmware upgrade steps to load the firmware into machine properly for evaluations.

a) Log in ATA via Microsoft Internet explorer web browser, and insert <http://ATA IP address/update.htm> in the address bar.

b) Select update "All ROM", and browse to the firmware location.

c) Please find the firmware (decompress and find the *.rom file for upgrade)

d) After firmware loaded, the unit will be reboot, and loaded with factory default values.

e) Default IP address of the customized firmware: <http://192.168.0.1>; login name/password: **root/null(no password)**

Note:

Connect analog telephone set and press “#120#” from keypad, the IVR will announce the current IP address of the ATA.

The default mode of VIP-157 is VoIP mode, it could press “0*” button for changing to PSTN mode.